


A close-up photograph of a black metal stand joint. The joint consists of a vertical post and a horizontal base. A circular plate is attached to the post, and a horizontal arm extends from it. Several black adjustment knobs are visible, used to secure and adjust the joint. The background is a plain, light-colored surface.

Assembling

the Monstrik
v.2021 stand

Step 1

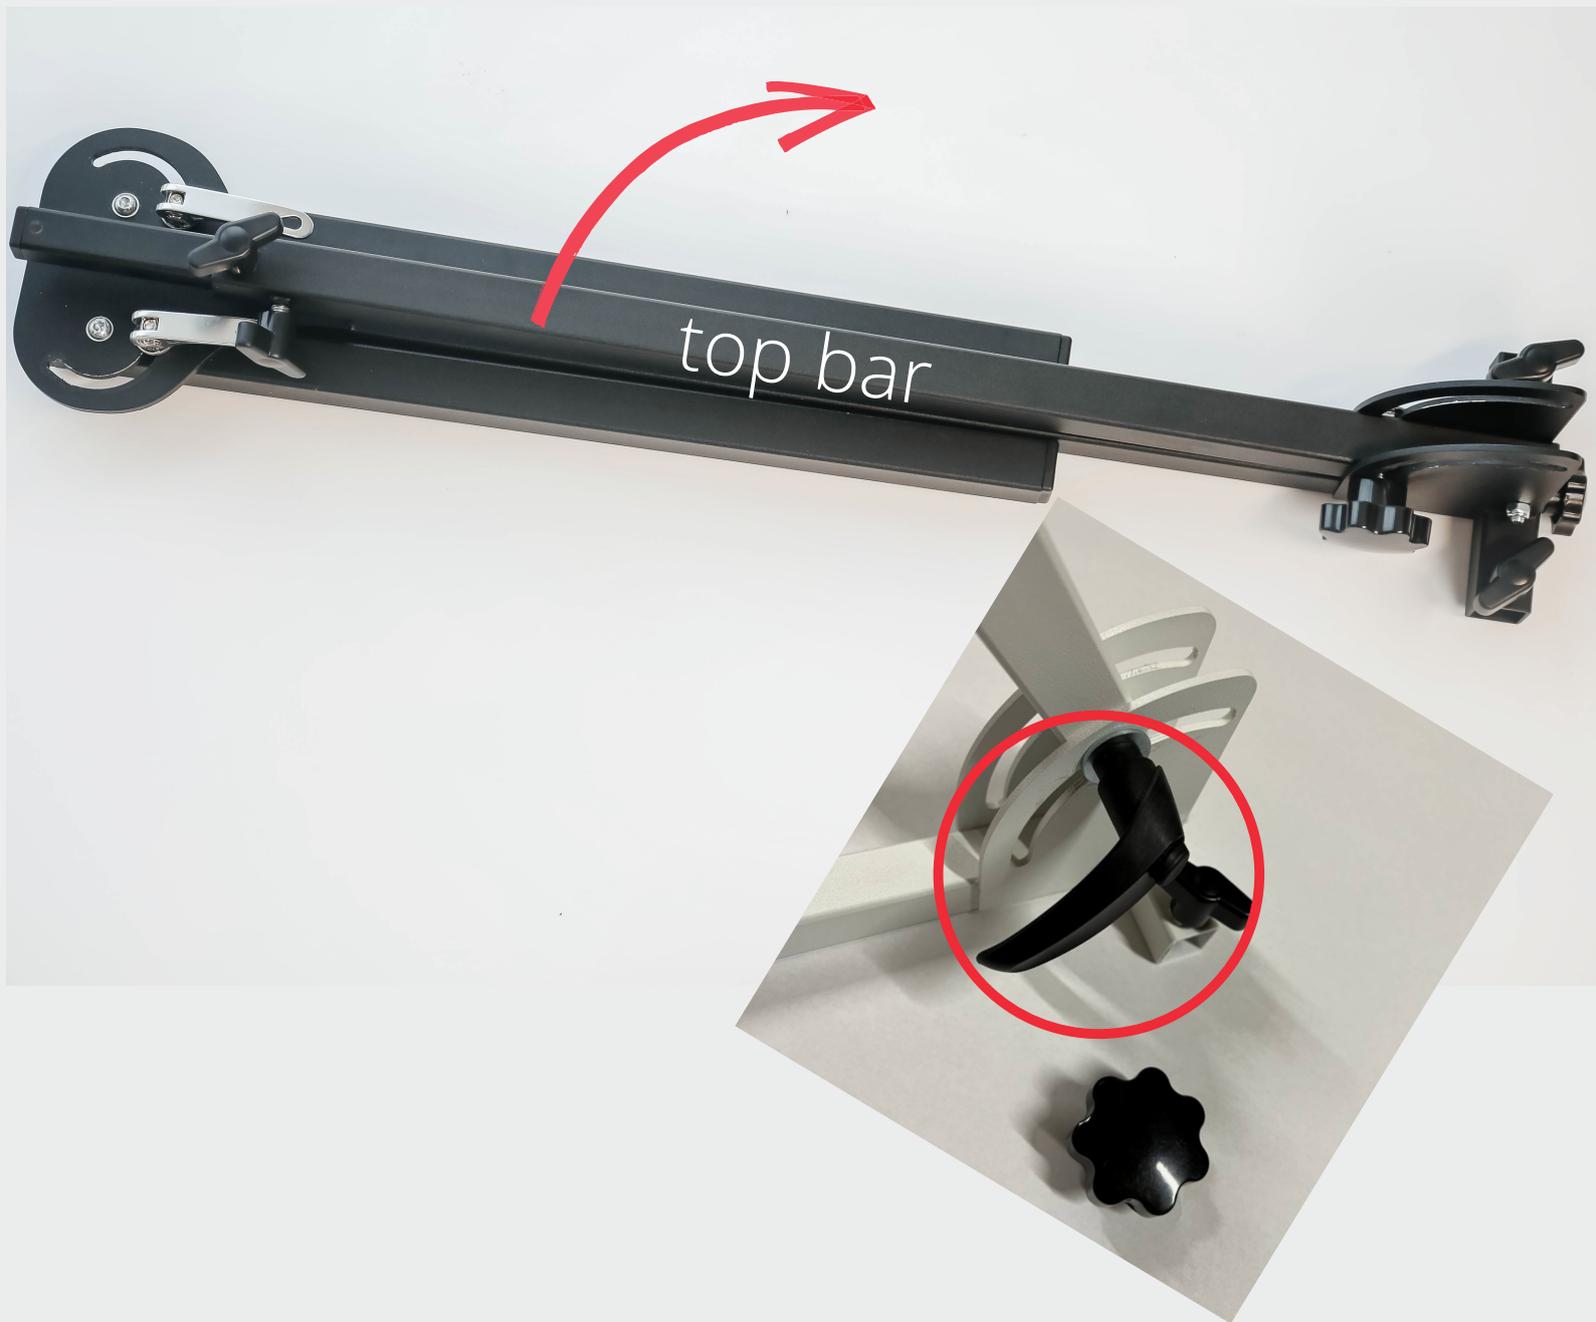

Loosen the big screw with a handle
in the red circle and lift the top bar
vertically

UPDATE! The big "flower" screw in the picture is replaced by
a screw with a handle

Further the angle can be adjusted
from 45 to 90 degrees



Tighten and leave the screw with a
handle



Step 2

Levers up

Quick release
lever clamps

y-shaped legs

y-shaped legs


a) Pull up the levers

DON'T SPIN



b) Open the y-shaped legs

c) Push the levers down in the direction
of Y-shaped legs

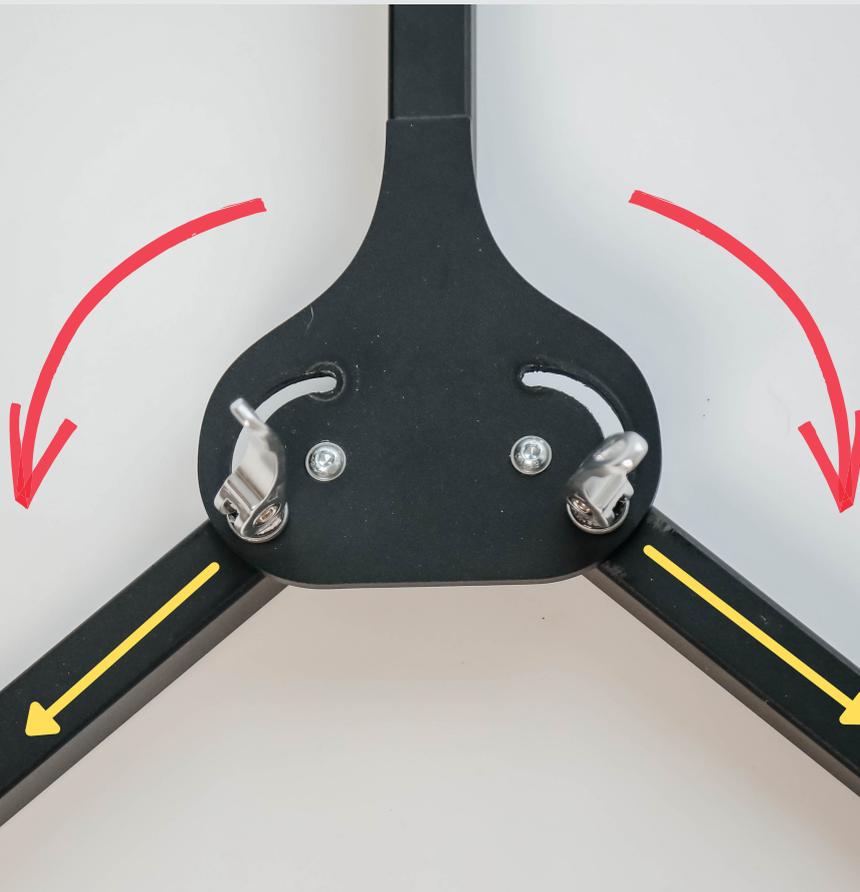



Step 3



a) Slide and tighten one wheel onto the base bar.

b) Place this bar into the y-shaped base part.

Untwist the screws enough in order not to scratch the bar, when you insert/move it.

c) Slide and tighten the second wheel on the base part.

d) And tighten all the screws at the base afterwards.



Step 4

Assembling the front module






- a) Untwist the **screws** of the front module enough
- b) Insert both L-bars to the front module: long L-bar on top, short L-bar at bottom

Step 5



a) Place the adjustable clamps in the front module

b) Unscrew the adjustable clamps, slide the frame in and tighten the **screws**

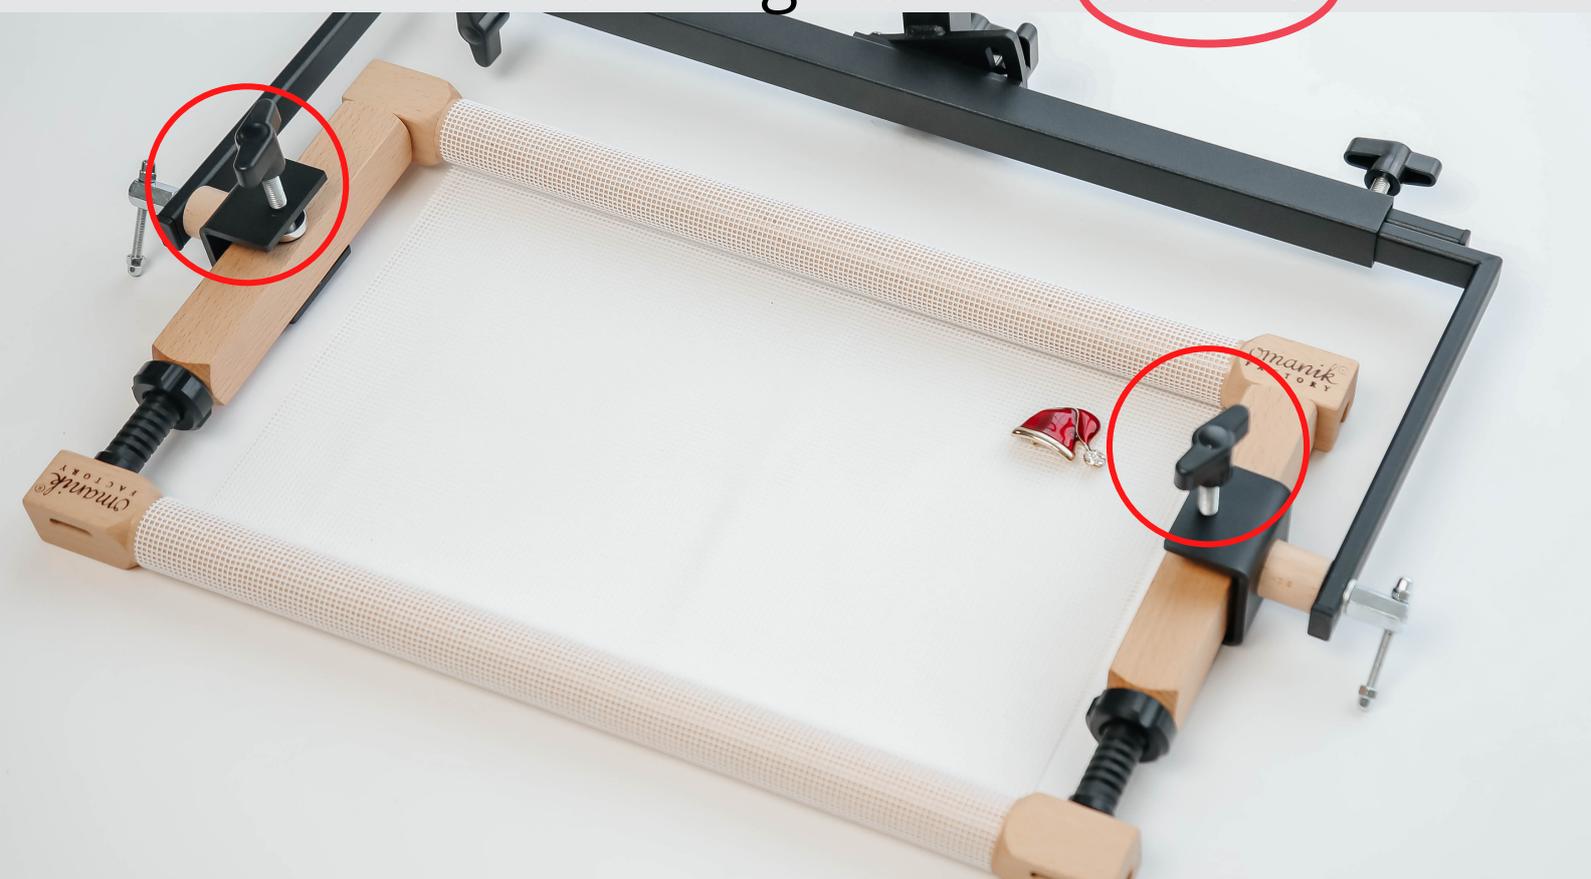

Step 6



Adjust to height



Step 7

Install the front module in desired position and tighten the **screws**




Step 8

Adjust tilt of the module for your right or left hand



Step 9

Side module

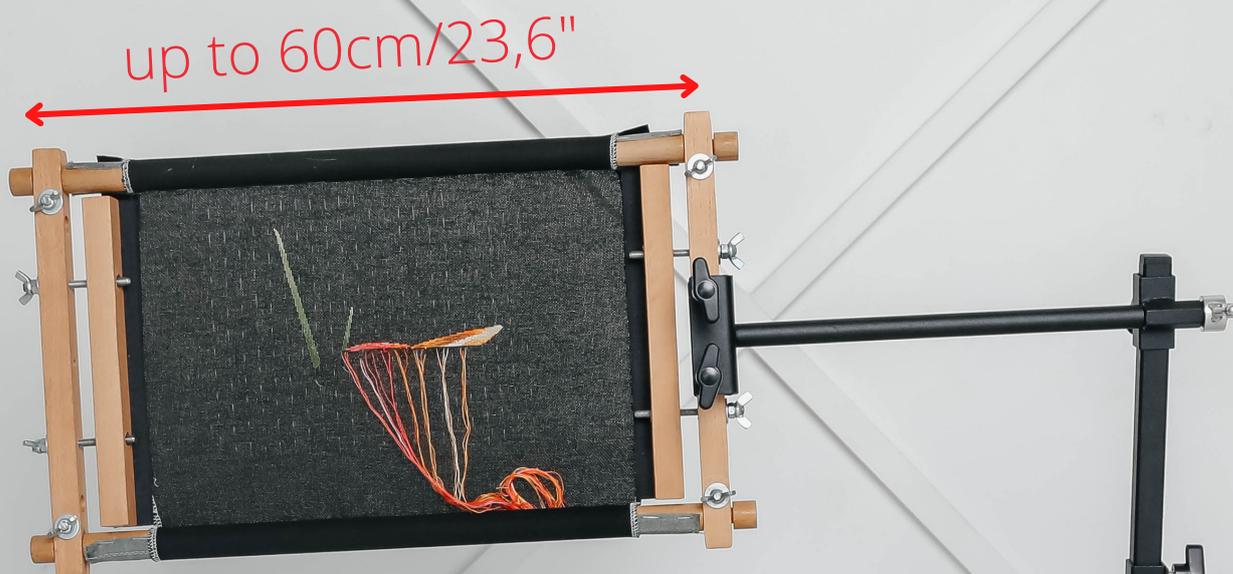

Small tilt of the module is acceptable


Use a side module with frames up to 60cm/23,6"





Move the wheel bar depending on your needs or better stability (for ex.a lamp, tablet holder, accessory module, etc are attached to the right then you move the wheel bar a little to the right



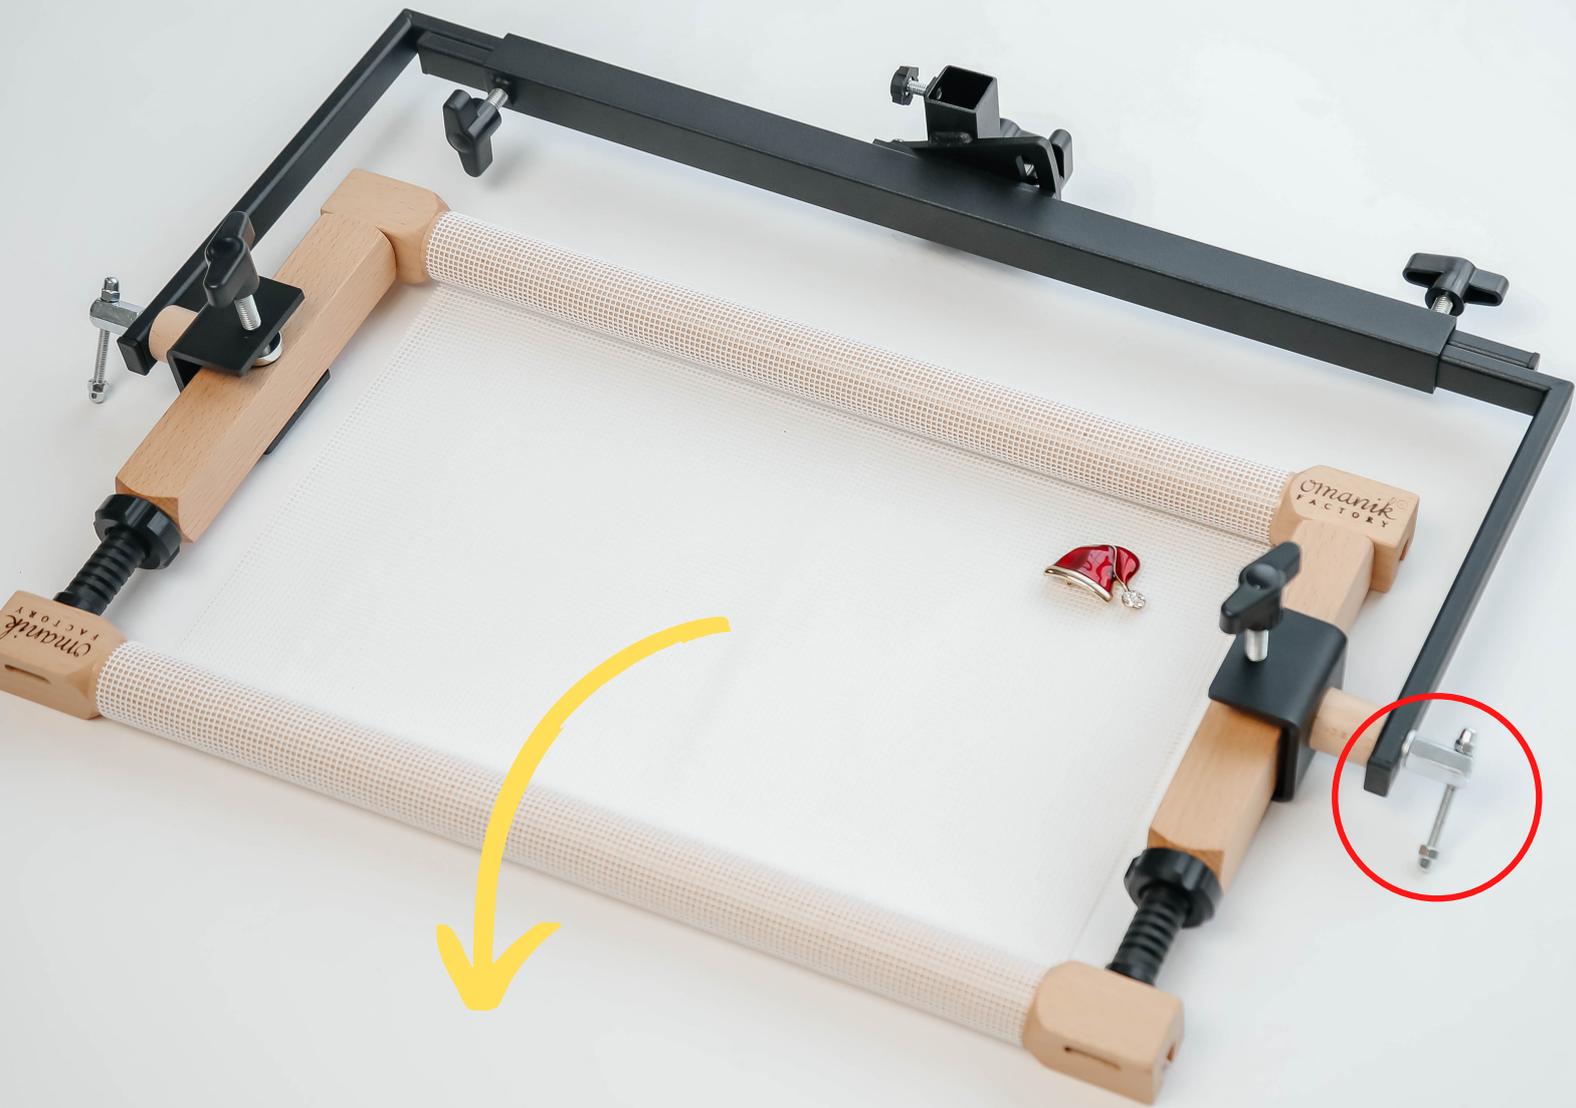

To reach the backside loosen the clamp and turn your frame



To move your Monstrik carry the stand's weight to the wheels bar slightly



Enjoy the productive stitching process with the Monstrik!